Technical Change Note 05

CHASSIS: BE, C7, C8, E1, E5, K1, K5, K6, I6, I9
SIZE: All DATE: 18/11/2005
REVISION: 01

Error Codes indicated via LED

The following table gives the error codes shown by LED blinking sequence for the current Beko chassis.

CHASSIS	ERROR CODE	DESCRIPTION	CHASSIS	ERROR CODE	DESCRIPTION
E1	1			1	
	2	Eeprom Failed		2	
	3	Power (Protection Input Failed)	C7	3	Power (Protection Input Failed)
	4	Vertical Protection Failed	C8	4	Vertical Protection Failed
	5			5	
	6			Cont.	Eeprom Failed (Continuously flashes)
E5	1			1	
	2	Eeprom Failed		2	
	3	Power (Protection Input Failed)	16	3	Power (Protection Input Failed)
	4	Vertical Protection Failed		4	Vertical Protection Failed
	5			5	
	6			Cont.	Eeprom Failed (Continuously flashes)
	1			1	Sdram Failed
	2			2	Eeprom Failed
K1	3	Power (Protection Input Failed)	22.1	3	Power (Protection Input Failed)
	4	Vertical Protection Failed	(BZ)	4	Tower (Freedom inpact allea)
	5	Torribal Fredoment and		5	
	Cont.	Eeprom Failed (Continuously flashes)		6	
	001111	Zoprom ramou (Commission) macrico)		Ŭ	
K5	1			1	Sdram Failed
	2		22.3 (BE)	2	Eeprom Failed
	3	Power (Protection Input Failed)		3	Power (Protection Input Failed)
	4	Vertical Protection Failed		4	,
	5			5	
	Cont.	Eeprom Failed (Continuously flashes)		6	
			10	_	
K6	1		19	1	Sdram Failed
	2			2	Eeprom Failed
	3	Power (Protection Input Failed)		3	Power (Protection Input Failed)
	4	Vertical Protection Failed		4	
	5			5	
	Cont.	Eeprom Failed (Continuously flashes)		6	
C8	1		22.2	1	
	2		(BD)	2	Eeprom Failed
	3	Power (Protection Input Failed)		3	Power (Protection Input Failed)
	4	Vertical Protection Failed		4	, , , , , , , , , , , , , , , , , , , ,
	5			5	
	Cont.	Eeprom Failed (Continuously flashes)		6	